

## **Table of contents**

Line plan for MENTOR 7

Line lengths for MENTOR 7 - XS


Full Line lengths for MENTOR 7 - XS

Line lengths for MENTOR 7 - S

Full Line lengths for MENTOR 7 - S

Line lengths for MENTOR 7 - M

Full Line lengths for MENTOR 7 - M

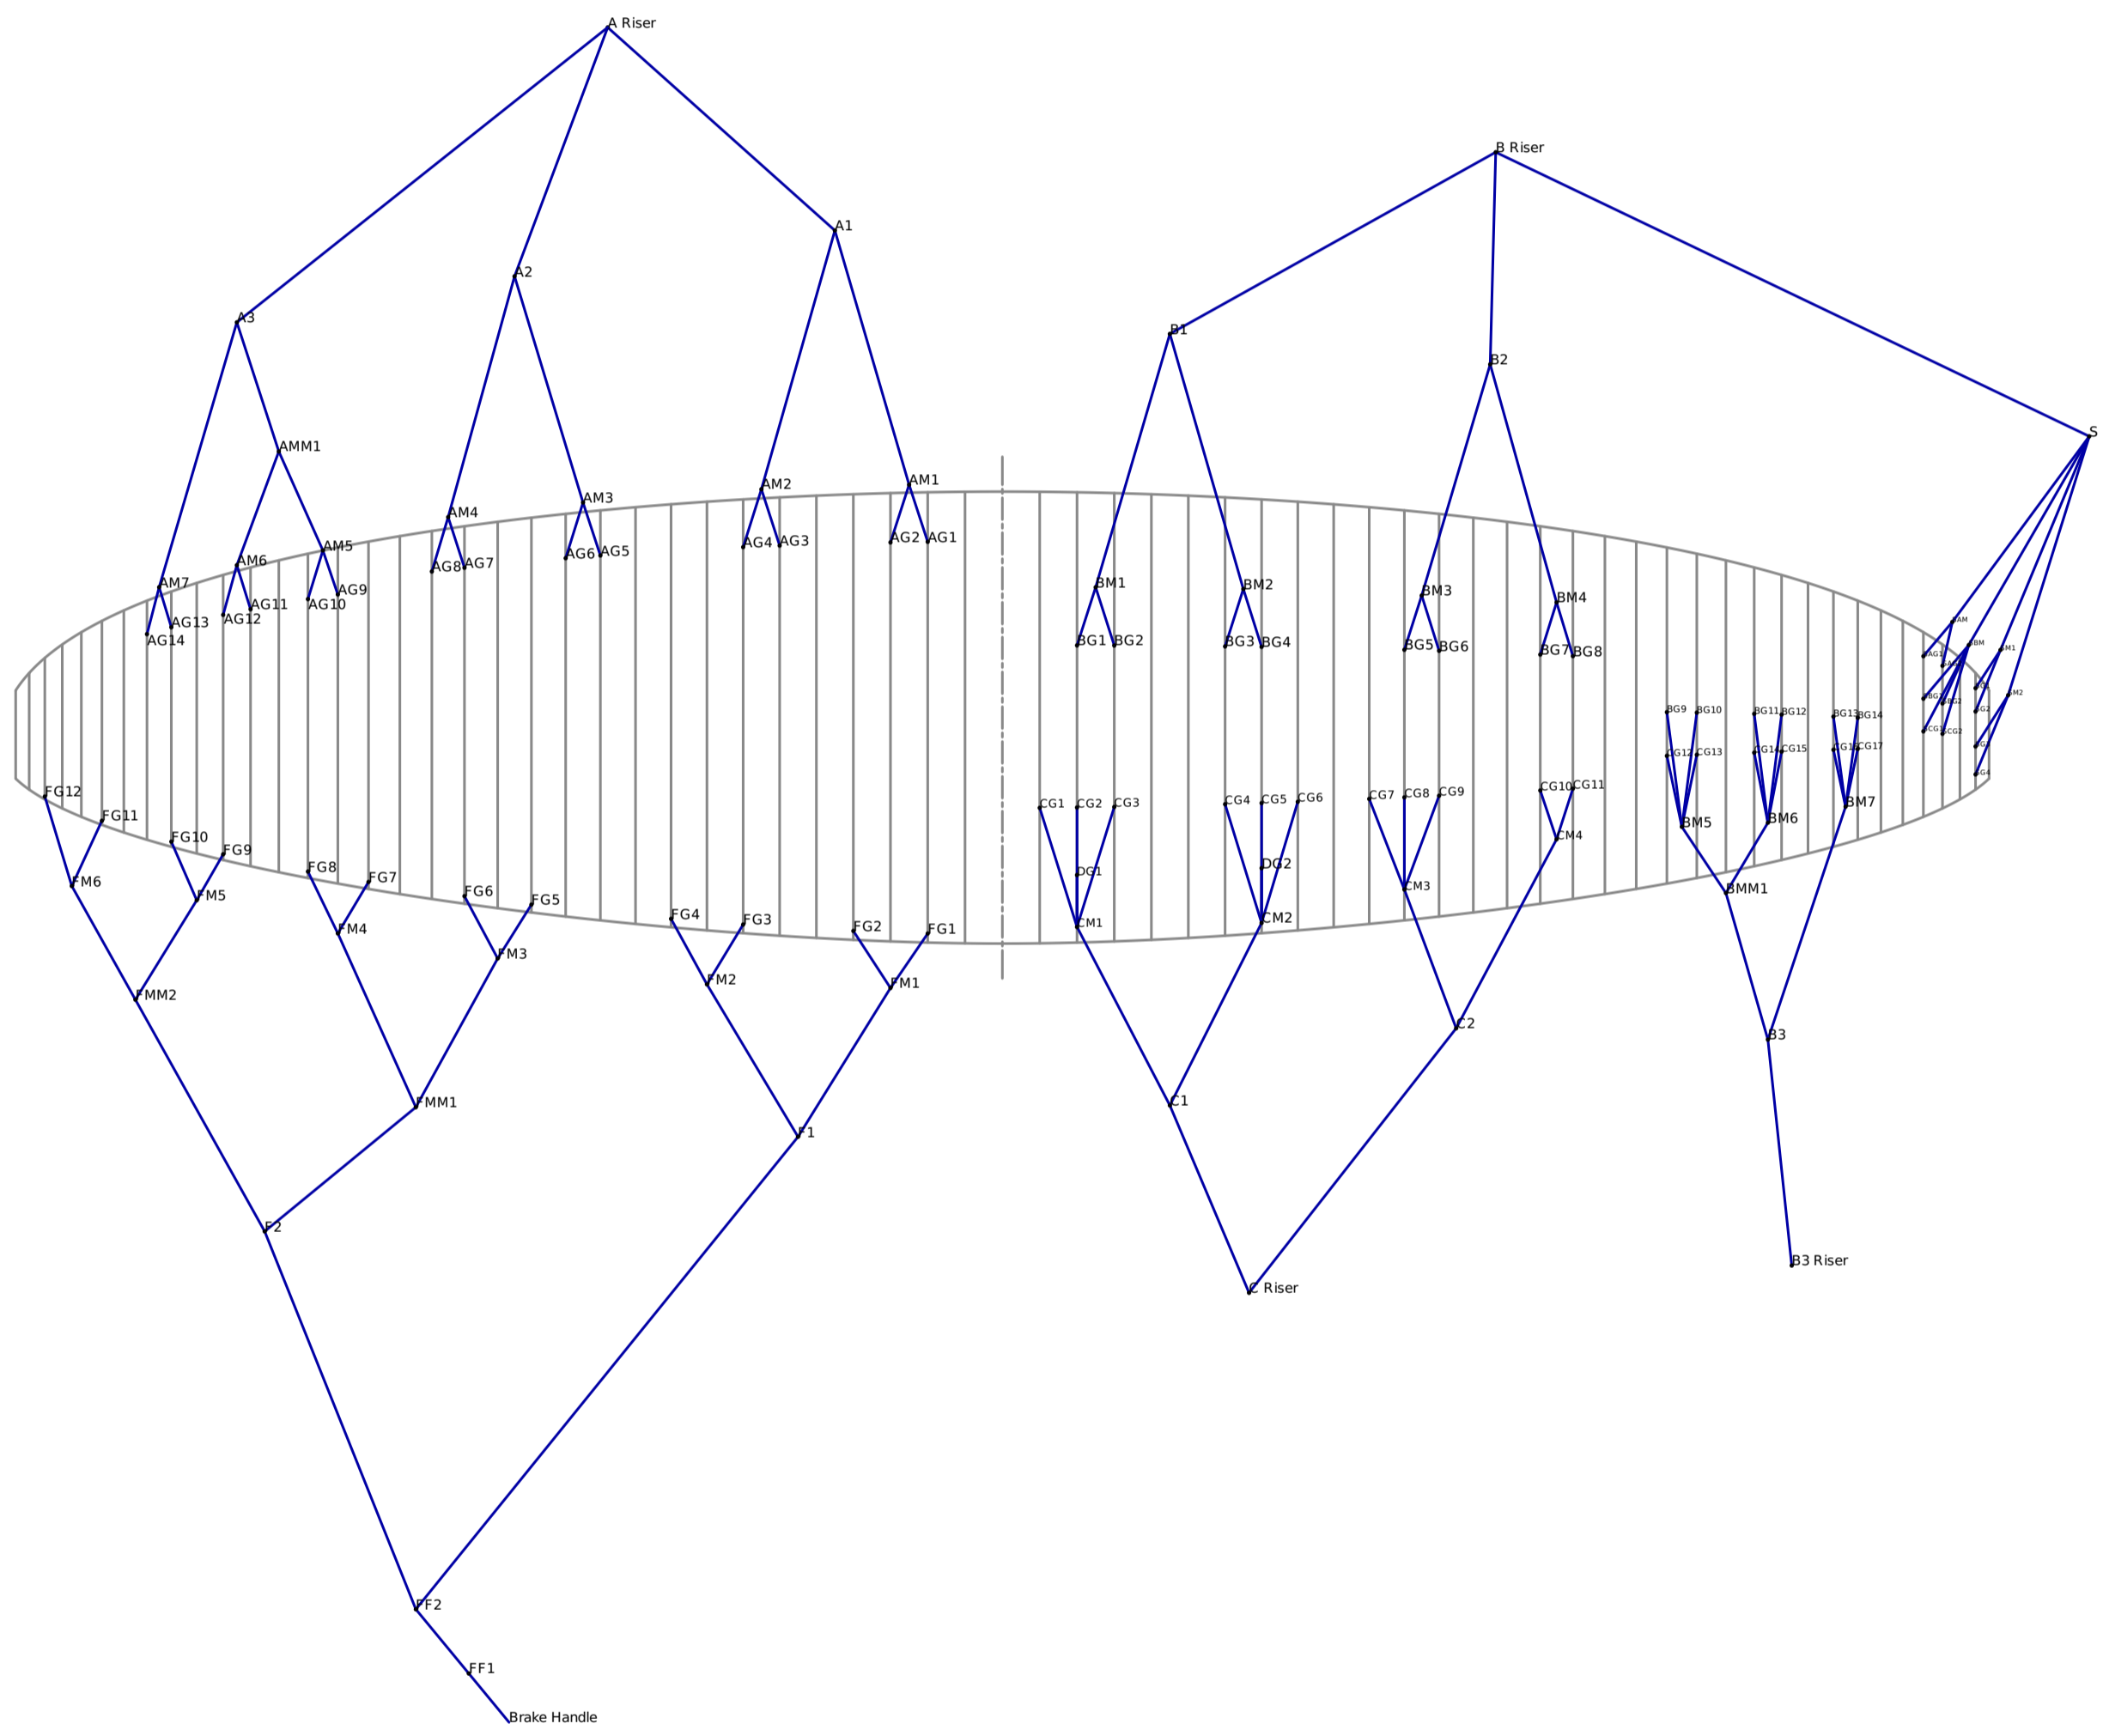

# Line lengths for MENTOR7 - XS

See also: [docs.nova.eu](https://docs.nova.eu) for a searchable online database

Position	Material	Length (cm)
A1	PPSL191M-RD	465.5
A2	PPSL191M-RD	475
A3	PPSL191M-RD	456.9
AM1	ED8kU-90DD-RD	137.7
AM2	ED8kU-90DD-RD	134.6
AM3	ED8kU-90DD-RD	122.9
AM4	ED8kU-90DD-RD	119.7
AM5	ED8kU-50DD-RD	58.6
AM6	ED8kU-50DD-RD	48.6
AM7	ED8kU-50DD-RD	116.6
AMM1	ED8kU-130DD-RD	70.7
AG1	ED8kU-50DD-RD	32.2
AG10	DC40	20.1
AG11	DC40	21.4
AG12	DC40	22.7
AG13	DC40	20.3
AG14	DC40	21.6
AG2	ED8kU-50DD-RD	28.3
AG3	ED8kU-50DD-RD	28.7
AG4	ED8kU-50DD-RD	30.9
AG5	ED8kU-50DD-RD	29.8
AG6	ED8kU-50DD-RD	26.4
AG7	ED8kU-50DD-RD	25.4
AG8	ED8kU-50DD-RD	27.8
AG9	DC40	26.3
B1	PPSL191-YW	291.3
B2	PPSL191-YW	459.3
B3	PPSL191-YW	442.4
BM1	ED8kU-90DD-RD	290.4
BM2	ED8kU-90DD-RD	287.4
BM3	ED8kU-90DD-RD	120.2
BM4	ED8kU-90DD-RD	117.9
BM5	ED8kU-50DD-RD	38.3
BM6	ED8kU-50DD-RD	31.9
BM7	ED8kU-50DD-RD	110.5
BMM1	ED8kU-90DD-RD	76.2
BG1	ED8kU-50DD-RD	31.2
BG10	ED8kU-50DD-RD	41.1
BG11	DC40	40.7

BG12	DC40	41.4
BG13	DC40	33.9
BG14	DC40	34.1
BG2	ED8kU-50DD-RD	29.5
BG3	ED8kU-50DD-RD	29.4
BG4	ED8kU-50DD-RD	29.9
BG5	ED8kU-50DD-RD	29.5
BG6	ED8kU-50DD-RD	25.9
BG7	ED8kU-50DD-RD	25
BG8	ED8kU-50DD-RD	27.5
BG9	ED8kU-50DD-RD	47.5
C1	A8001 U130DD_BE	486.2
C2	A8001 U130DD_BE	303.2
CM1	ED8kU-70DD-RD	103.4
CM2	ED8kU-70DD-RD	95.6
CM3	ED8kU-70DD-RD	272.5
CM4	ED8kU-70DD-RD	288.2
CG1	ED8kU-50DD-RD	58.8
CG10	ED8kU-50DD-RD	26.1
CG11	ED8kU-50DD-RD	27
CG12	ED8kU-50DD-RD	51.8
CG13	ED8kU-50DD-RD	45.2
CG14	DC40	45.5
CG15	DC40	45.3
CG16	DC40	36.7
CG17	DC40	36.7
CG2	ED8kU-50DD-RD	48.2
CG3	ED8kU-50DD-RD	44.8
CG4	ED8kU-50DD-RD	48.4
CG5	ED8kU-50DD-RD	48.5
CG6	ED8kU-50DD-RD	55.7
CG7	ED8kU-50DD-RD	52.5
CG8	ED8kU-50DD-RD	47.1
CG9	ED8kU-50DD-RD	48.5
DG1	ED8kU-50DD-RD	65.9
DG2	ED8kU-50DD-RD	62.5
F1	ED8kU-70DD-RD	315.8
F2	ED8kU-70DD-RD	165.5
FM1	ED8kU-50DD-RD	98
FM2	ED8kU-50DD-RD	58.4
FM3	ED8kU-50DD-RD	89.7
FM4	ED8kU-50DD-RD	69.1
FM5	ED8kU-50DD-RD	50.6

FM6	ED8kU-50DD-RD	51.1
FMM1	ED8kU-50DD-RD	127.8
FMM2	ED8kU-50DD-RD	136.5
FG1	DC40	81.8
FG10	DC40	24.3
FG11	DC40	23.1
FG12	DC40	42.1
FG2	DC40	52.2
FG3	DC40	63
FG4	DC40	47.5
FG5	DC40	38.5
FG6	DC40	27
FG7	DC40	27.2
FG8	DC40	32.7
FG9	DC40	25.5
FF1	ED7850-2400	120
FF2	ED8kU-130DD-RD	127.7
SM1	DC40	99.5
SM2	DC40	101.3
SG1	DC40	21.5
SG2	DC40	24
SG3	DC40	26.7
SG4	DC40	33.1
S	DSL70-GN	434.1
SAG1	DC40	18.6
SAG2	DC40	17.1
SAM	DC40	109.6
SBG1	DC40	31.4
SBG2	DC40	28.4
SBM	DC40	96.9
SCG1	DC40	37.6
SCG2	DC40	35.4

# Full Line lengths for MENTOR7 - XS

See also: [docs.nova.eu](https://docs.nova.eu) for a searchable online database

<b>Position</b>	<b>Length (cm)</b>
A4	6799
A5	6763
A6	6730
A7	6689
A8	6714
A9	6610
A10	6549
A11	6463
A12	6476
A13	6427
A14	6440
A15	6208
A16	6194
B4	6674
B5	6678
B6	6642
B7	6610
B8	6636
B9	6529
B10	6466
B11	6398
B12	6407
B13	6355
B14	6359
B15	6208
B16	6180
C3	6834
C4	6790
C5	6792
C6	6865
C7	6770
C8	6716
C9	6732
C10	6664
C11	6674
C12	6573
C13	6508
C14	6447
C15	6446

C16	6384
C17	6385
C18	6271
C19	6251
F3	6845
F4	6691
F5	6688
F6	6573
F7	6370
F8	6426
F9	6254
F10	6243
F11	6235
F12	6427
S4	6274
S3	6209
S2	6163
S1	6138
	0

# Line lengths for MENTOR7 - S

See also: [docs.nova.eu](https://docs.nova.eu) for a searchable online database

Position	Material	Length (cm)
A1	PPSL191-M_RED	483.1
A2	PPSL191-M_RED	486.4
A3	PPSL191-M_RED	461.1
AM1	ED8kU-90DD-RED	144.3
AM2	ED8kU-90DD-RED	140.3
AM3	ED8kU-90DD-RED	129.4
AM4	ED8kU-90DD-RED	123.7
AM5	ED8kU-50DD-RED	61.7
AM6	ED8kU-50DD-RED	49.8
AM7	ED8kU-50DD-RED	120.7
AMM1	ED8kU-130DD-RED	75.8
AG1	ED8kU-70DD	33.6
AG10	DC40-RED	20.6
AG11	DC40-RED	23.1
AG12	DC40-RED	24.6
AG13	DC40-RED	20.9
AG14	DC40-RED	22.6
AG2	ED8kU-50DD-RED	29.5
AG3	ED8kU-50DD-RED	30.1
AG4	ED8kU-50DD-RED	32.2
AG5	ED8kU-70DD	31.2
AG6	ED8kU-50DD-RED	27.2
AG7	ED8kU-50DD-RED	26.9
AG8	ED8kU-50DD-RED	28.9
AG9	DC40-RED	27.4
B1	PPSL191-YW	299.1
B2	PPSL191-YW	470.4
B3	PPSL191-YW	447.3
BM1	ED8kU-90DD-RED	303.8
BM2	ED8kU-90DD-RED	300.9
BM3	ED8kU-90DD-RED	126.3
BM4	ED8kU-90DD-RED	122.4
BM5	ED8kU-50DD-RED	40.3
BM6	ED8kU-50DD-RED	32.6
BM7	ED8kU-50DD-RED	114.5
BMM1	ED8kU-90DD-RED	81
BG1	ED8kU-50DD-RED	32.4
BG10	DC40-RED	42.7
BG11	DC40-RED	43.1



BG12	DC40-RED	44.2
BG13	DC40-RED	34.8
BG14	DC40-RED	35.6
BG2	ED8kU-50DD-RED	30.9
BG3	ED8kU-50DD-RED	30.7
BG4	ED8kU-50DD-RED	31.2
BG5	ED8kU-50DD-RED	30.8
BG6	ED8kU-50DD-RED	26.8
BG7	ED8kU-50DD-RED	26.3
BG8	ED8kU-50DD-RED	28.6
BG9	DC40-RED	49.6
C1	ED8001-130D-BE	503.7
C2	ED8001-130D-BE	307.2
CM1	ED8kU-70DD	108.5
CM2	ED8kU-70DD	99.8
CM3	ED8kU-70DD	285.7
CM4	ED8kU-70DD	300
CG1	ED8kU-50DD-RED	61.4
CG10	ED8kU-50DD-RED	27.5
CG11	ED8kU-50DD-RED	28.1
CG12	ED8kU-50DD-RED	54.1
CG13	ED8kU-50DD-RED	47
CG14	ED8kU-50DD-RED	47.7
CG15	ED8kU-50DD-RED	47.9
CG16	DC40-RED	38.3
CG17	DC40-RED	38.4
CG2	ED8kU-50DD-RED	50.5
CG3	ED8kU-50DD-RED	47.1
CG4	ED8kU-50DD-RED	50.8
CG5	ED8kU-50DD-RED	50.8
CG6	ED8kU-50DD-RED	58.2
CG7	ED8kU-50DD-RED	55.1
CG8	ED8kU-50DD-RED	49.1
CG9	ED8kU-50DD-RED	50.4
F1	ED8kU-70DD	335.1
F2	ED8kU-70DD	170.8
FM1	ED8kU-50DD-RED	103
FM2	ED8kU-50DD-RED	61
FM3	ED8kU-50DD-RED	93
FM4	ED8kU-50DD-RED	70.7
FM5	ED8kU-50DD-RED	53.5
FM6	ED8kU-50DD-RED	54.7
FMM1	ED8kU-50DD-RED	135.2

FMM2	ED8kU-50DD-RED	140
FG1	DC40-RED	85.2
FG10	DC40-RED	25.3
FG11	DC40-RED	24
FG12	DC40-RED	44.3
FG2	DC40-RED	54.3
FG3	DC40-RED	65.8
FG4	DC40-RED	49.4
FG5	DC40-RED	40.5
FG6	DC40-RED	27.7
FG7	DC40-RED	28.8
FG8	DC40-RED	33.9
FG9	DC40-RED	26.8
FF1	ED7850-2400	120
FF2	ED8kU-130DD-RED	125.2
SM1	DC40-RED	104.2
SM2	DC40-RED	106.5
SG1	DC40-RED	22.3
SG2	DC40-RED	25.1
SG3	DC40-RED	27.7
SG4	DC40-RED	34.6
S	ED8kU-90DD-RED	449.5
SAG1	DC40-RED	19.4
SAG2	DC40-RED	17.9
SAM	DC40-RED	114.3
SBG1	DC40-RED	32.6
SBG2	DC40-RED	29.6
SBM	DC40-RED	101.3
SCG1	DC40-RED	39.3
SCG2	DC40-RED	37.1

# Full Line lengths for MENTOR7 - S

See also: [docs.nova.eu](https://docs.nova.eu) for a searchable online database

<b>Position</b>	<b>Length (cm)</b>
A4	7063
A5	6976
A6	6936
A7	6877
A8	6897
A9	6764
A10	6695
A11	6602
A12	6617
A13	6543
A14	6560
A15	6349
A16	6334
B4	6923
B5	6887
B6	6848
B7	6803
B8	6826
B9	6688
B10	6618
B11	6545
B12	6556
B13	6482
B14	6490
B15	6350
B16	6320
C3	7105
C4	7055
C5	7055
C6	7130
C7	6991
C8	6932
C9	6944
C10	6858
C11	6864
C12	6733
C13	6661
C14	6591
C15	6593

C16	6517
C17	6518
C18	6417
C19	6396
F3	7069
F4	6905
F5	6840
F6	6712
F7	6501
F8	6551
F9	6356
F10	6341
F11	6340
F12	6543
S4	6423
S3	6353
S2	6304
S1	6276
	0

# Line lengths for MENTOR7 - M

See also: [docs.nova.eu](https://docs.nova.eu) for a searchable online database

Position	Material	Length (cm)
A1	PPSL191M-RD	516.5
A2	PPSL191M-RD	524.3
A3	PPSL191M-RD	504.2
AM1	ED8kU-90DD-RD	150.5
AM2	ED8kU-90DD-RD	147.6
AM3	ED8kU-90DD-RD	134.4
AM4	ED8kU-90DD-RD	131.2
AM5	ED8kU-50DD-RD	64.1
AM6	ED8kU-50DD-RD	53.2
AM7	ED8kU-50DD-RD	127.7
AMM1	ED8kU-130DD-RD	77.4
AG1	ED8kU-50DD-RD	35.2
AG10	DC40	22
AG11	DC40	24
AG12	DC40	25.8
AG13	DC40	21.7
AG14	DC40	23.7
AG2	ED8kU-50DD-RD	31
AG3	ED8kU-50DD-RD	31.3
AG4	ED8kU-50DD-RD	33.8
AG5	ED8kU-50DD-RD	32.6
AG6	ED8kU-50DD-RD	28.9
AG7	ED8kU-50DD-RD	27.8
AG8	ED8kU-50DD-RD	30.5
AG9	DC40	28.8
B1	PPSL191-YW	326.6
B2	PPSL191-YW	508.1
B3	PPSL191-YW	488.5
BM1	ED8kU-90DD-RD	317.7
BM2	ED8kU-90DD-RD	314.9
BM3	ED8kU-90DD-RD	131.5
BM4	ED8kU-90DD-RD	129.2
BM5	ED8kU-50DD-RD	41.9
BM6	ED8kU-50DD-RD	34.9
BM7	ED8kU-50DD-RD	121
BMM1	ED8kU-90DD-RD	83.4
BG1	ED8kU-50DD-RD	34
BG10	ED8kU-50DD-RD	45
BG11	DC40	45.1

BG12	DC40	46.4
BG13	DC40	36.5
BG14	DC40	37.4
BG2	ED8kU-50DD-RD	32.3
BG3	ED8kU-50DD-RD	32.1
BG4	ED8kU-50DD-RD	32.8
BG5	ED8kU-50DD-RD	32.3
BG6	ED8kU-50DD-RD	28.4
BG7	ED8kU-50DD-RD	27.3
BG8	ED8kU-50DD-RD	30.1
BG9	ED8kU-50DD-RD	52
C1	A8001 U130DD_BE	539.7
C2	A8001 U130DD_BE	336.7
CM1	ED8kU-70DD-RD	113
CM2	ED8kU-70DD-RD	105
CM3	ED8kU-70DD-RD	298.2
CM4	ED8kU-70DD-RD	315.6
CG1	ED8kU-50DD-RD	64.3
CG10	ED8kU-50DD-RD	28.5
CG11	ED8kU-50DD-RD	29.6
CG12	ED8kU-50DD-RD	56.7
CG13	ED8kU-50DD-RD	49.5
CG14	DC40	49.8
CG15	DC40	50.2
CG16	DC40	40.1
CG17	DC40	40.2
CG2	ED8kU-50DD-RD	52.8
CG3	ED8kU-50DD-RD	49.2
CG4	ED8kU-50DD-RD	52.8
CG5	ED8kU-50DD-RD	53.1
CG6	ED8kU-50DD-RD	61
CG7	ED8kU-50DD-RD	57.4
CG8	ED8kU-50DD-RD	51.5
CG9	ED8kU-50DD-RD	53.2
DG1	ED8kU-50DD-RD	72.2
DG2	ED8kU-50DD-RD	68.4
F1	ED8kU-70DD-RD	348
F2	ED8kU-70DD-RD	181.7
FM1	ED8kU-50DD-RD	107.2
FM2	ED8kU-50DD-RD	64.1
FM3	ED8kU-50DD-RD	96.4
FM4	ED8kU-50DD-RD	75.8
FM5	ED8kU-50DD-RD	55.3

FM6	ED8kU-50DD-RD	56.9
FMM1	ED8kU-50DD-RD	139.7
FMM2	ED8kU-50DD-RD	150.7
FG1	DC40	89.6
FG10	DC40	26.6
FG11	DC40	25.1
FG12	DC40	46.1
FG2	DC40	57.2
FG3	DC40	68.9
FG4	DC40	52
FG5	DC40	43.1
FG6	DC40	29.6
FG7	DC40	29.8
FG8	DC40	34.8
FG9	DC40	27.8
FF1	ED7850-2400	120
FF2	ED8kU-130DD-RD	148.7
SM1	DC40	108.9
SM2	DC40	110.9
SG1	DC40	23.5
SG2	DC40	26.2
SG3	DC40	29.2
SG4	DC40	36.2
S	DSL70-GN	484
SAG1	DC40	20.3
SAG2	DC40	18.7
SAM	DC40	120
SBG1	DC40	34.3
SBG2	DC40	31.1
SBM	DC40	106.1
SCG1	DC40	41.2
SCG2	DC40	38.8

# Full Line lengths for MENTOR7 - M

See also: [docs.nova.eu](https://docs.nova.eu) for a searchable online database

<b>Position</b>	<b>Length (cm)</b>
A4	7468
A5	7399
A6	7363
A7	7320
A8	7348
A9	7230
A10	7163
A11	7074
A12	7093
A13	7024
A14	7044
A15	6829
A16	6813
B4	7332
B5	7306
B6	7267
B7	7234
B8	7262
B9	7142
B10	7073
B11	7004
B12	7019
B13	6947
B14	6957
B15	6829
B16	6797
C3	7508
C4	7463
C5	7466
C6	7547
C7	7411
C8	7353
C9	7370
C10	7297
C11	7309
C12	7189
C13	7118
C14	7052
C15	7058



C16	6984
C17	6986
C18	6898
C19	6875
F3	7494
F4	7326
F5	7291
F6	7156
F7	6952
F8	7004
F9	6838
F10	6827
F11	6829
F12	7039
S4	6900
S3	6829
S2	6779
S1	6751
	0